



# DRAWING AND PARTS LIST FOR 8400, 8400/V & 8400/V60

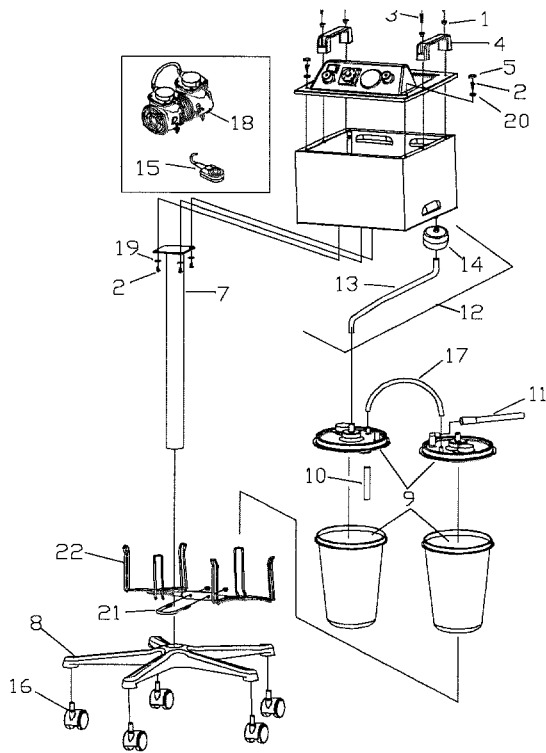

Item No.	Part No.	Comp. No.	Description	Qty.
1	624086		Bushing	4
2	625841		Screw - Cover & Pedestal	10
3	625852		Screw - Handle	4
4	629079		Handle	2
5	633849		Cap - Screw	2
8	638271		Plug - Handle	4
7	638515		Pedestal	1
8	638455		Stand	1
9	614829		Jar & Lid Assembly	2
10	615592		Tubing - 2"	1
11	615725		Tubing W/Connectors	1
12	641244		Hydrophobic Filter Assembly	1
13		618181	Tube - Jar to Filter (13")	1
14		641243	Hydrophobic Filter Capsule	1
15	602807		Air Switch (On/Off)	1
16	638514		Casters	4
17	618181		Tube - 13"	1
18	See Chart		Compressor Assembly	1
19	626563		Washer - Pedestal to Enclosure	4
20	662255		Base - Cover Screw	2
21	626815		U-Clamp - Bottle Holdert	1
22	629149		Bottle Holder	1
<b>MODEL 8400</b>				
18	664958		Compressor Ass'y - 115V, 60Hz	1
<b>MODEL 8400/V</b>				
18	664982		Comp. Ass'y - 220/230V, 50Hz	1
<b>MODEL 8400/V/60</b>				
18	664903		Compressor Ass'y - 230V, 60Hz	1

# DRAWING AND PARTS LIST FOR COMPRESSOR ASSEMBLY

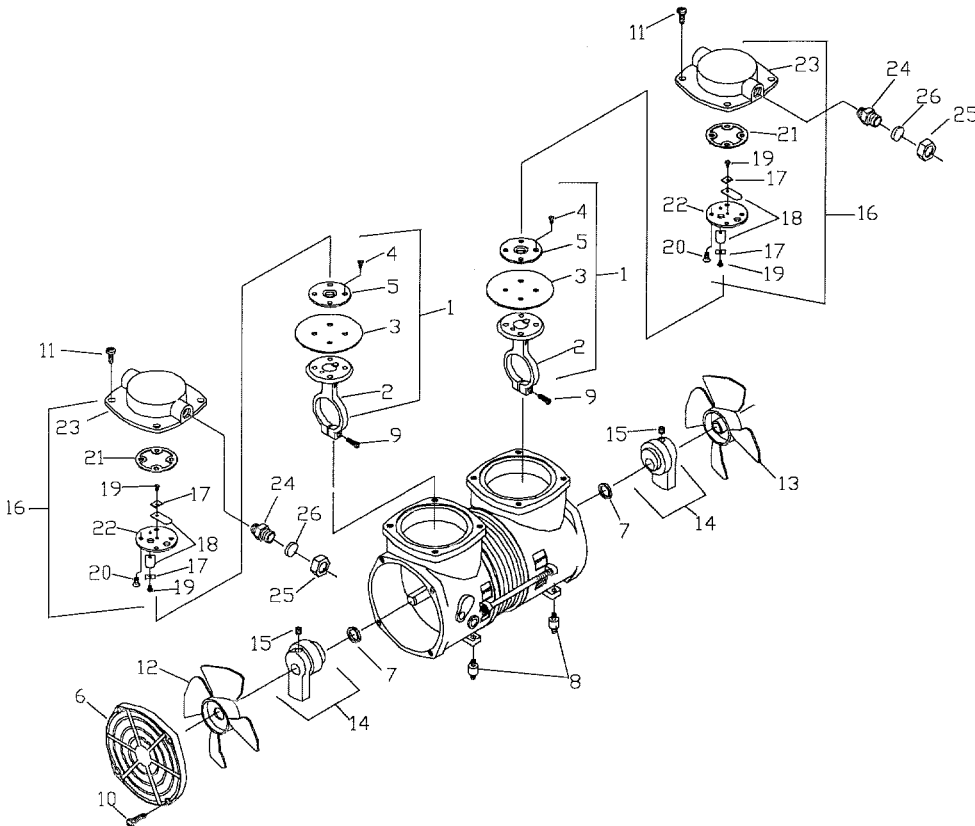

Item No.	Part No.	Comp. No.	Description	Qty.
1	See Chart		Connecting Rod Assembly	2
2		607139	Connecting Rod	2
3		608148	Diaphragm	2
4		625540	Screw - Hold down Plate	8
5		654649	Hold Down Plate	2
6	624935		Front Cover	1
7	615403		Spacer - Eccentric	2
8	624442		Rubber Mount	4
9	625114		Screw - Connecting Rod	2
10	625266		Screw - Front Cover	4
11	625444		Screw - Head	8
12	633544		Fan - White	1
13	633545		Fan - Gray	1
14	See Chart		Eccentric & Bearing Assembly	2
15		625244	Set Screw - Eccentric	2
16	664961		Head & Valve Plate Assembly	2
17		617045	Valve Keeper Strip	2
18		621102	Valve Flapper - Intake & Exhaust	4
19		625160	Screw - Valve Flapper	4
20		625446	Screw - Valve Plate	8
21		633439	Gasket - Valve Plate	2
22		654129	Valve Plate	2
23		660469	Head	2
24	624848		Fitting - Reducer	2
25	626455		Nut	2
26	641020		Filter - Silencer	2
<b>MODEL 1245 &amp; 1247</b>				
1	607180		Connecting Rod Assembly	2
14	645298		Eccentric & Bearing Assembly	2
<b>MODEL 1246</b>				
1	607180		Connecting Rod Assembly	2
14	645372		Eccentric & Bearing Assembly	2